

The present techincal bulletin contains technical information aimed to support/improve Navalimpianti Tecnimpianti equipment in operation. This Technical Bulletin applies to:

HNICAL

()

Navalimpianti Tecnimpianti winches DGHW, HW and SDHW series - Brake pump pressure

Technical Bulletin Nr. 020-17



NAVALIMPIANTI - TECNIMPIANTI



Technical Bulletin Nr. 020-17

This technical bulletin applies to:


#### Navalimpianti Tecnimpianti winches DGHW, HW and SDHW series - Brake pump pressure

#### **General description**

The Operating and Maintenance Manual of the winches type DGHW, HW and SDHW series, have been slightly modified at paragraph related to:

Winch operating instruction / Boat lowering - brake oil pressure adjustment

The new procedure foresee the brake pump pressure **to be adjusted to about 1 bar, just before the boat lowering.** 

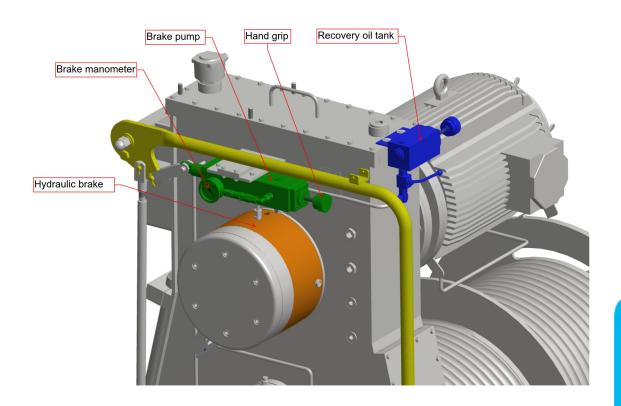




Brake Manometer Brake pump Hand grip BUL Hydraulic brake HNICAL operation. Recovery oil tank. 

Picture 1 - SDHW 210 Winch

Recovery oil tank

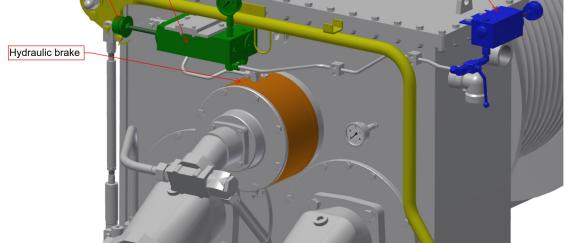

Picture 2 - HW200 Winch

It's therefore **not** any more necessary to maintain a constant pressure between 0.5 / 3 bar inside the brake pump circuit **between one winch operation and the next one**, but the brake pump pressure is to be set at 1 bar **just before** each winch operation.

It is always important to monthly check both the external oil leakage of *brake pump* and brake pump circuit (fittings and pipes) and the position of *hand grip* compared to colored zone on label behind it and, if necessary, refill the brake circuit using the *Recovery oil tank*.

Note: In case the oil quantity inside the hydraulic control circuit is not enough, it may be refilled by the *Recovery oil tank* filling procedure.



All the Winches Operating and Maintenance Manuals have been updated accordingly.

For further information refers to Operating and Maintenance Manual of each winch type.





Head Office Salita Guardia, 60A 16014 Ceranesi (GE) Italy Ph +39 01072371 Fax +39 010710173 navim@navim.com

Branch Office Via Terza Armata, 18 34074 Monfalcone (GO) Italy Ph +39 0481490111 Fax +39 0481410659 navimmo@navim.com

Branch Office Via dei Pescatori Z.I. Porto 16129 Genova Italy Ph +39 0102461013 +39 0102461113 Fax +39 0102471030 navimge@navim.com



NAVALIMPIANTI USA, Inc. 900 NW 10th AVE Fort Lauderdale, FL 33311 USA Ph +1 9545857041 Fax +1 9545857042 navimusa@navim.com

Z



NAVALIMPIANTI NORGE AS Vingveien, 1 - 4050 Sola (Stavanger) - Norway Phone: +47 516 50959 Fax: +47 516 57605 info@navim.no



NAVALIMPIANTI PULA Mietacka, 12 - 52100 Pula Hrvatska Ph +385 52216590 Fax +385 52216590 navimpula@navim.com



NAVALIMPIANTI EMIRATES c/o TILE MARINE LLC AI Jadaf Ship Docking Yard Dubai Room 130 - DUBAI UAE Phone +971 4 3242820 Fax +971 4 3242823 navimemirates@navim.com



TECNIMPIANTI SpA Zona Industriale Str. Consortile Fiume Torto 90018 Termini Imerese (PA) Italy Ph +39 0918140283 Fax +39 0918140225 info@tecnimpiantispa.com



TECNIMPIANTI S.p.A. Via Edda Fagni 45 57126 Livorno (LI) Italy Phone +39 0586954086 Fax +39 0586953736 livorno@tcimp.com



TECNIMPIANTI ANTWERP Oud Arenberg 84 9130 Kieldrecht Belgium Phone +32 35680127 Fax +32 32531139 ma@tecnimpiantiantwerp.com



NAVALIMPIANTI CHINA Unit 1101 A Xin Cheng Mansion No 167 Jiang Ning Rd. 200041 Shanghai P.R. China Ph. +86 2162587116 Fax +86 2162587169 navimchina@navim.com



NAVALIMPIANTI SINGAPORE Service Centre 50 Tuas Avenue 11 #02 - 19 Tuas Lot Singapore 639107 Phone +65 66598997 Fax +65 66598870 navimsingapore@navim.com

#### Technical Bulletin Nr. 020-17

