


DATE: October 08 th , 2015	MARINE SAFETY BULLETIN: 03/15USA
	PRIORITY LEVEL: NORMAL
EQUIPMENT:	
LSA's ELECTRIC MOTOR WINCHES AND ASSOCIATED TELESCOPIC SYSTEMS WITH SHOCK ABSORBERS (LIFEBOATS, TENDERBOATS AND RESCUEBOATS STATIONS)	
TEMPORARY INSTRUCTIONS VALIDITY AND APPLICABILITY:	
Starting date: October, 2015	
End date: Upon receiving the final Technical Notice instruction by Manufacturer.	
Vessel: M/S Sunshine	
BULLETIN CONTENTS AND CLARIFICATIONS:	
<p><u>These temporary instruction are not applicable to a real emergency abandon ship and any lowering operations</u> Extra operating safety instructions to prevent contain unwanted mechanical over-stresses.</p> <p>This Bulletin applies to every of the following activities:</p> <ol style="list-style-type: none"> 1) Lifeboats / Tenders/ Rescue boats maintenance 2) Lifeboats / Tenders/ Rescue boats trainings 3) Lifeboats / Tenders/ Rescue boats drills 4) Lifeboats / Tenders/ Rescue boats - any LSAs service 5) Lifeboats / Tenders/ Rescue boats day to day operations 	
REFERENCE:	
Shock absorber tests.	
DISTRIBUTION:	
N.A.	
EXTRA OPERATING SAFETY INSTRUCTIONS:	
See instructions on next pages.	

WINCHES FITTED ON TENDER STATIONS ONLY

1. STOP the electrical hoisting when the boat blocks distance is approximately 2÷3m from the davit's block stop on the trolley;
2. Make sure that both fall blocks are evenly distanced from the Davit's head:

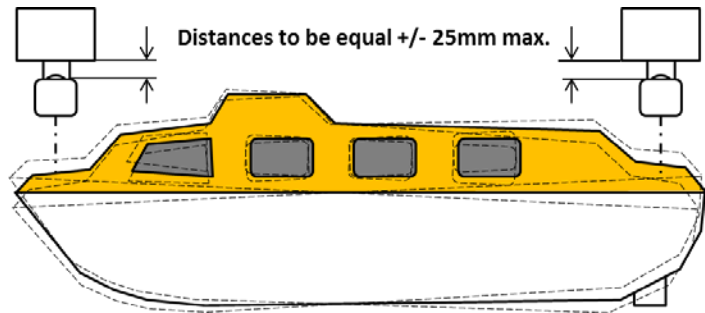

Blocks misalignment checking

3. Resume the electrical hoisting in LOW speed;
4. STOP the hoisting when the blocks are right underneath the davit's trolley at about 10÷20cm.




5. Use the hand crank to complete the hoisting maneuver up to the block stop against the trolley.




WINCHES FITTED ON LIFEBOATS & RESCUE BOATS STATIONS ONLY

1. STOP the electrical hoisting when the boat blocks distance is approximately 2÷3m from the davit's block stop on the trolley;
2. Make sure that both fall blocks are evenly distanced from the Davit's head:

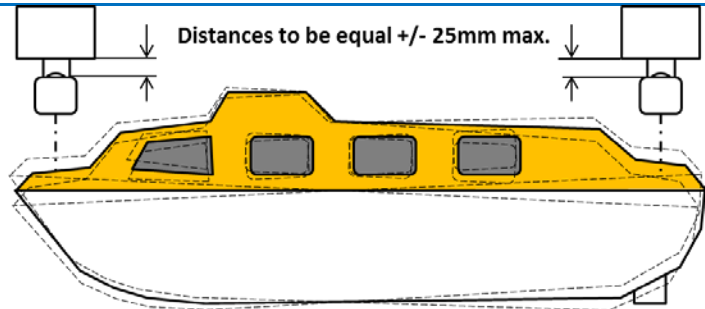

Blocks misalignment checking

3. Resume the electrical hoisting.
4. STOP the heaving when the blocks are right underneath the davit's trolley at about 10÷20cm.

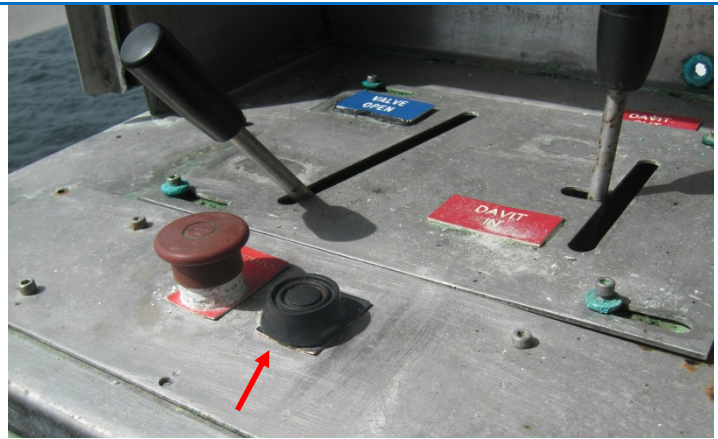

5. Use the hand crank to complete the hoisting maneuver up to the block stop against the trolley.



Issued by: